

Remote Control

Pay-Per-View

QUICK REFERENCE

TV (mode)

Control your TV with the remote.

Source

Control the input source to your satellite receiver or TV.

Enter

In any menu, press ENTER to select a highlighted item. In SAT mode, press ENTER to tune to a channel whose numbers you have already pressed.

Go Back

To return to a previous menu.

Guide

To display the Interactive Program Guide. Press again to remove.

Info

To display detailed information about the current program or a highlighted program in the Guide. Press again to remove.

Browse

To see program information for channels and times other than the current channel and time. Press ENTER to tune to the program in the Browse banner. Press GO BACK to remove while watching TV.

Help

To display the Help screens. Press again to remove.

SAT (mode)

Control your receiver with the remote for viewing satellite and cable TV signals.

Arrow keys

To highlight menu screen items, and to navigate between listings in the Browse banner.

Exit

To exit any menu and watch a program, or to display program information if already watching a program.

Options

To exit any menu and display the Options menu. Press again to remove.

Interests

To exit any menu and display the Interests menu. Press again to remove.

Future

To display a program banner of what's on in the future, while watching a program.

Ch +, Ch -

To change the channel. If using a menu, press to change channels without removing the menu. If using the Guide, press to move one screen up or down.

Last Ch


To return to the last channel watched.



It's easy to watch recent movies, live sports or concert events on Pay-Per-View, with convenient push-button ordering.*

To Order Pay-Per-View

1. Press **SAT** on your remote. Tune to any channel that displays Pay-Per-View programs.
2. Follow the instructions on the Purchase menu. Select a program and time to watch. Your selection, start/end times, ratings, and price will be displayed.
3. To purchase, press **ENTER**, and follow any additional instructions.
4. A confirmation screen appears. Press **ENTER** to confirm your purchase. If the program is on later, a countdown timer displays the time remaining before the program begins.

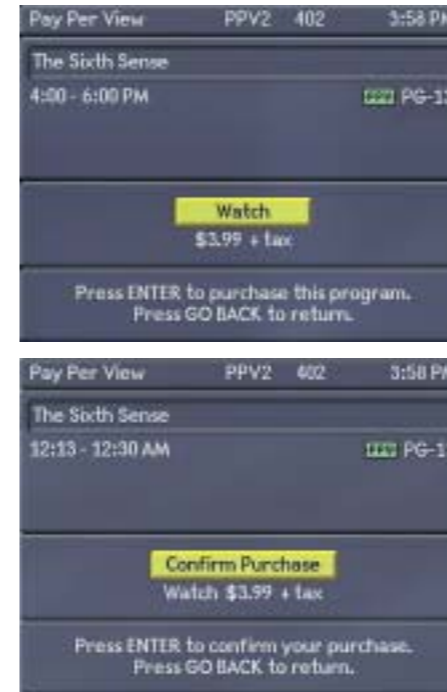

To Cancel Pay-Per-View

After confirming your purchase, you may only cancel it before the movie/event begins. To cancel the purchase, follow the on-screen instructions, or change the channel, before the movie/event begins.

* Receiver must be connected to a telephone jack. PPV purchasing screens will vary. Prices and programming shown in examples are for demonstration. When telephone jack is not connected, please contact your satellite/cable service provider.



MOTOROLA

Broadband Communications Sector

Interactive Program Guide and Remote Control Instructions

Dual Source Receiver DSR-410

Digital satellite and local TV combined in one interactive system



Standard two-device remote pictured. Optional three- and four-device remotes have additional functions.

As with most universal remote controls on the market today, this remote control uses an infrared beam that transmits codes recorded on a memory chip that match codes used by TV manufacturers in their remote controls. TVs that were built before manufacturers started using these codes can not be controlled by this remote control.

MOTOROLA, the Stylized M Logo and all other trademarks indicated as such herein are trademarks of Motorola, Inc. © Reg. U.S. Pat. & Tm. Off. All other product or service names are the property of their respective owners. © 2000 Motorola, Inc. All rights reserved. Printed in the U.S.A. Features and functions subject to change without notice 10/01

475804-001 LIT, QUICK INSTALL, DSR410MN