 


Getting started with the Interactive Program Guide

Your new DSR-410 has a wealth of user-friendly features to make your entertainment experience more enjoyable. Accessing those features is simple and fun, using the remote control and the Interactive Program Guide (Guide). Here are the basics to get you started:

Watching TV

When tuning to a channel, program information automatically appears and disappears after allowing you time to read it. Press **ENTER** to display program information at any time while watching TV.

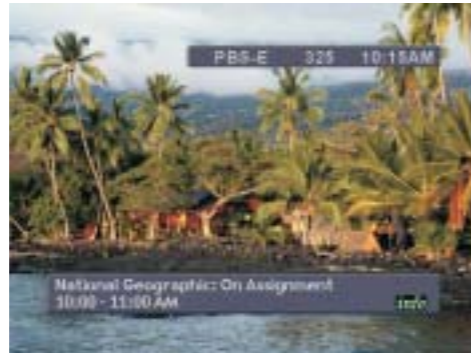

- Press **CH +** or **CH -** to change the channel.
- Press **LAST CH** to return to the previously tuned channel.
- Press **INFO** to see more detailed program information.
- Press **EXIT** to remove the banner.

Browsing While Watching TV

While watching a program, you can check what's showing on other channels now, and at other times, by pressing the **BROWSE** key. The Browse banner will appear with current program information.



- Press the **▲▼** arrow keys to check what's on other channels.
- Press the **◀▶** arrow keys to check earlier or later times on the current channel.
- Press **ENTER** to watch the program shown in the banner.
- Press **FUTURE** to display a different day and/or time.
- Press **INFO** to see more detailed program information.
- Press **GO BACK** to return to watching TV.



Using OPTIONS

- Press **OPTIONS** to display the Options menu.
- Press the **▲▼◀▶** keys to highlight a menu item. Items highlighted in yellow can be selected. Press **ENTER** to select a highlighted item.
- If the menu items are numbered, you can select one simply by pressing its number.
- Press **EXIT** to return to watching TV.

Press
GUIDE



Displaying the Guide

- Press the **GUIDE** key once to display a full screen Guide.
- Press **GUIDE** again, or press **EXIT**, to return to watching TV.
- Press **GO BACK** to return to the last menu, or to watching TV.
- In order to display programming which is currently in progress, your Guide screen starts a half hour before the current time.

Press
INTERESTS

 


Displaying Your Interests

- For fast browsing, customize your Guide listings using the **INTERESTS** menu.
- Press **INTERESTS** to display the Interests menu.
 - Select a popular category — movies/drama, news/education, sports, music/radio, network series, or Pay-Per-View — to display exclusively these types of programs in your Guide.**
 - **FAVORITES** allows you to display only the channels you select. Create your Favorites lists in **OPTIONS**.
 - Select **ALL PROGRAMS** when you want to browse all programming choices.






Using the Guide

- Press the **▲▼** arrow keys to highlight different channels.
- Press **◀▶** arrow keys to highlight different times.
- Enter a channel number to see it highlighted at the top of the listings.
- Press **INFO** to display more detailed information.
- Press **CH +** or **CH -** to move one screen up or down through the Guide.
- To tune to a highlighted program that is on now, press **ENTER**. If it is on later, you can set a timer so you won't miss it (Refer to the User Guide.). If it is a Pay-Per-View program, you can order it using your remote.

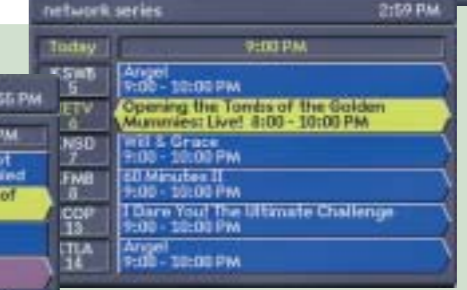

** Available categories may vary according to your satellite/cable service provider.

     Press
OPTIONS

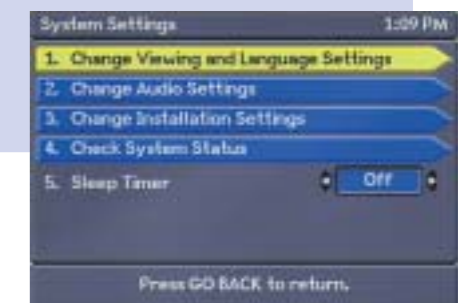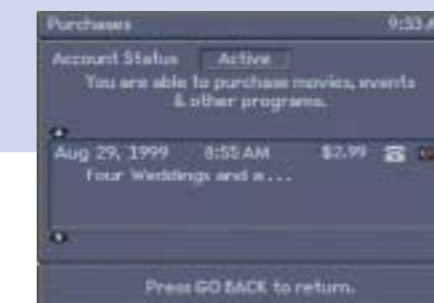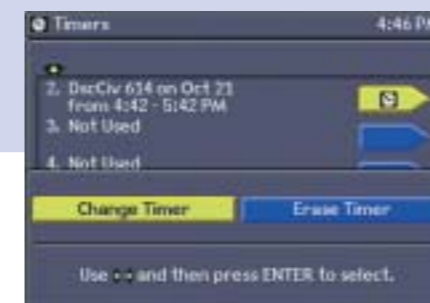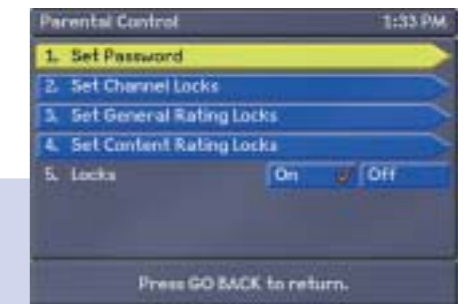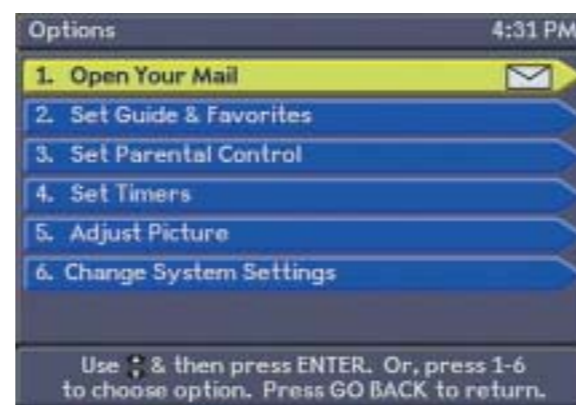

More detailed information is available in the User Guide.